


Swinger 3000


Assembly Instructions

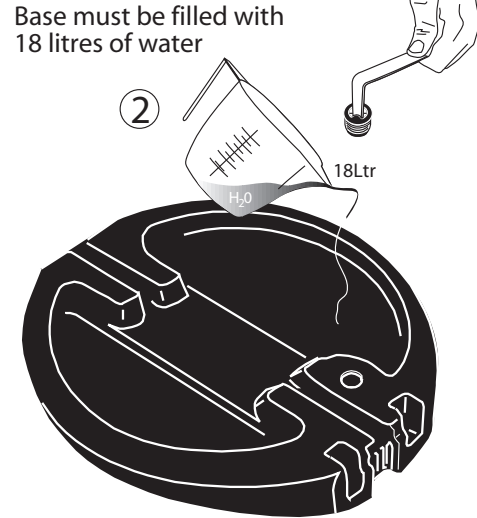

Base must be filled with 18 litres of water



18Ltr

These cut outs in the base fit over the wheels on the frame

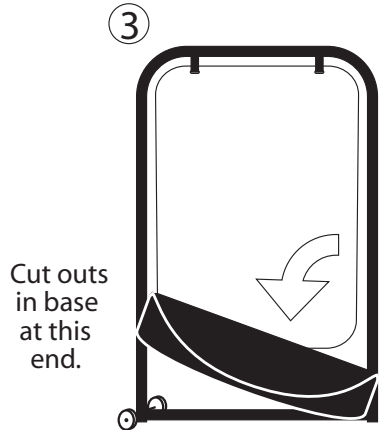

Cut outs in base at this end.


Wheels

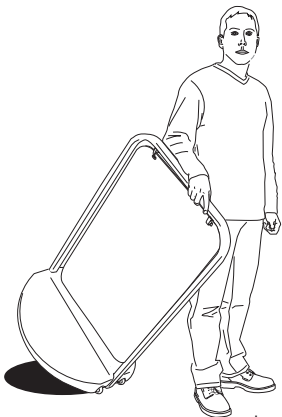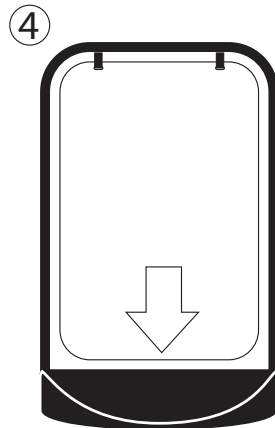


Once assembled, the whole sign can be easily moved without the need to remove the base.

We wish to point out that it is the responsibility of the shop owner/user to ensure that the siting of this pavement sign complies with all the local By Laws and Highway Regulations.



Panel Installation

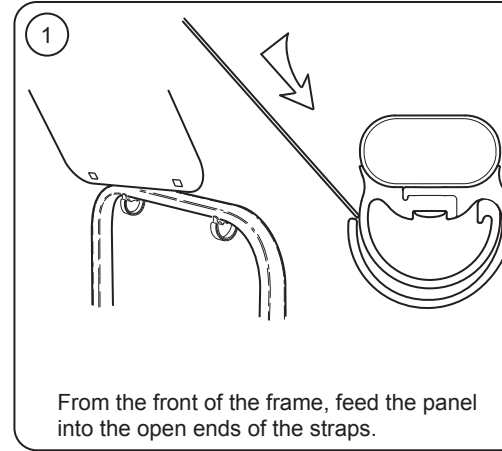


From the front of the frame, feed the panel into the open ends of the straps.

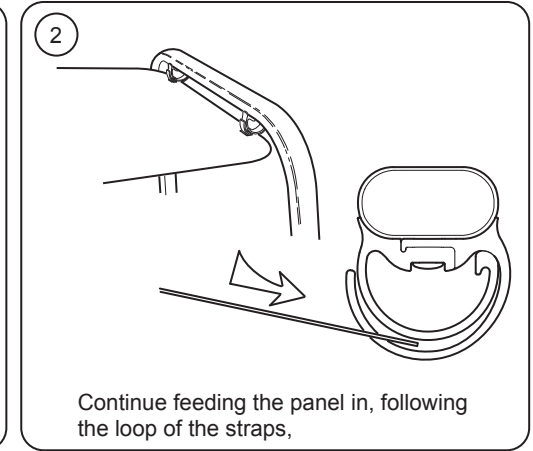


Continue feeding the panel in, following the loop of the straps,

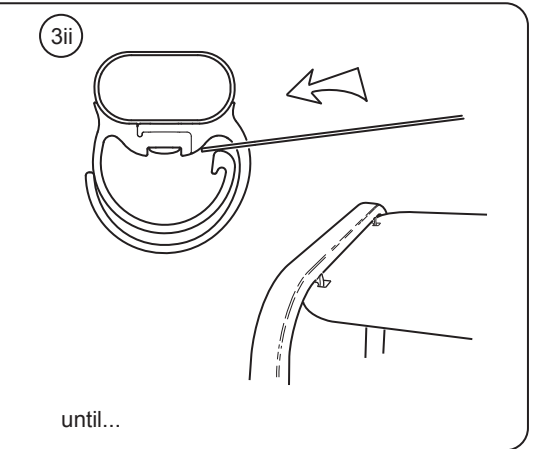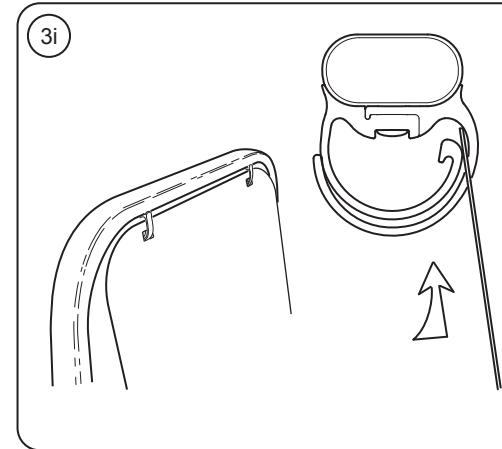

until...

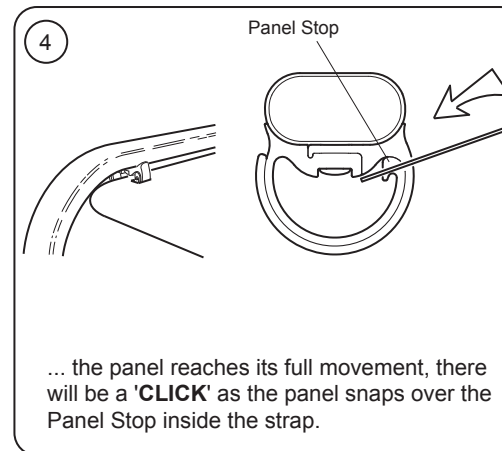

... the panel reaches its full movement, there will be a **'CLICK'** as the panel snaps over the Panel Stop inside the strap.

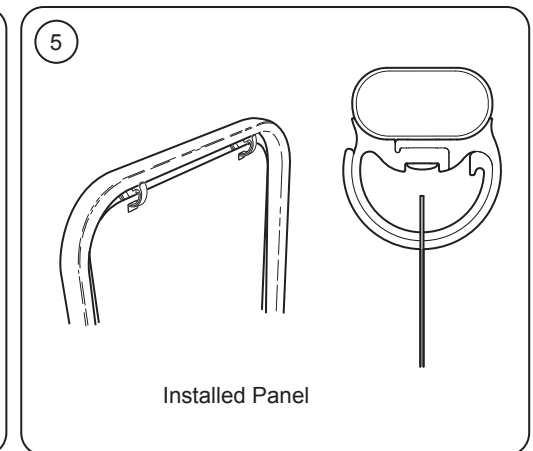

Installed Panel